

**FLEXMAX™ LIFT SERIES
FRAME-ENGAGING
CROSS BEAM KITS*
SERVICE WHEELS AND TIRES**

**PICK UP BUSES, RVs
AND MORE WITH
WHEELS-FREE,
FRAME-ENGAGING
BEAM KITS**


**LOW PROFILE
M140070YL
CROSS BEAM KIT**

Kit includes single cross beam

30,000 lbs. CAPACITY
at maximum 49" adapter spread



21,000 lbs. CAPACITY
at minimum 25" adapter spread

Contact points need to be equally spaced off each lift and frame should be centered between lifts to help prevent offset loading.

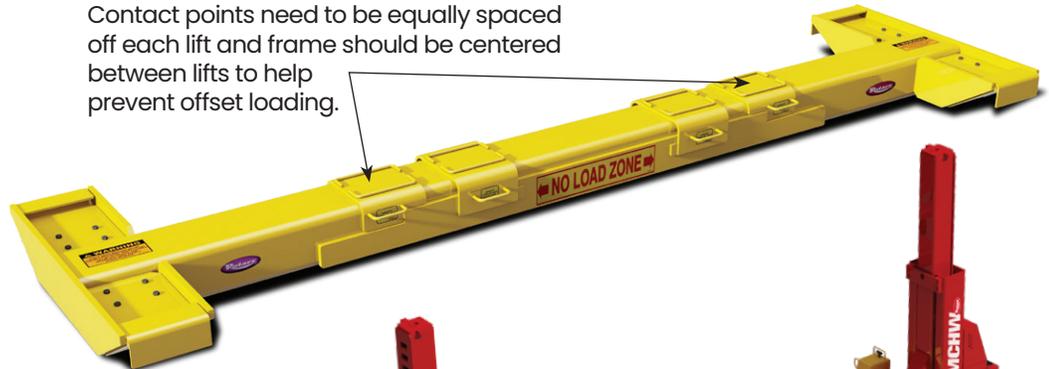

To install, simply push crossbeam lift adapter into desired position under vehicle.

Push the mobile column fork arms into beam ends completely until ends of crossbeam rest on the heel of the forks. Raise crossbeam and adjust to contact the frame at proper lifting point.

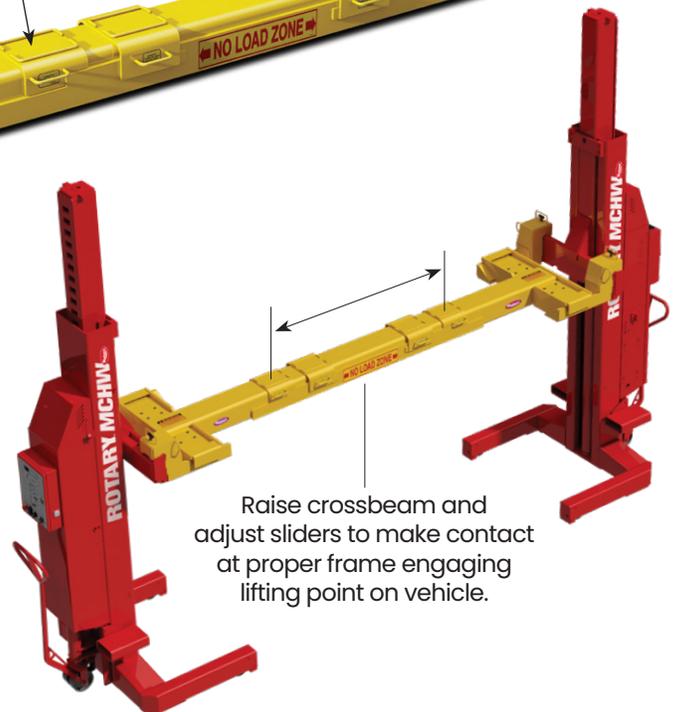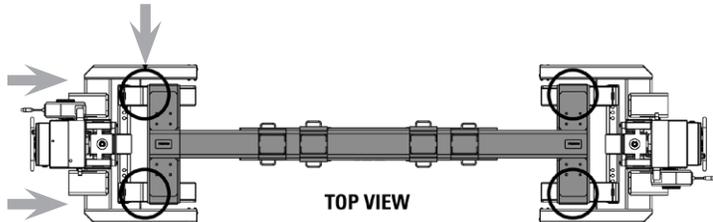

Raise crossbeam and adjust sliders to make contact at proper frame engaging lifting point on vehicle.

WARNING:

Never exceed rated capacity when using beam kits.
Refer to operating instructions supplied with lift for proper lifting procedures.

Operate mobile column lifts to desired height. Always use safety stands as needed or when installing or removing heavy components.


CAUTION:

Never use a bent or damaged crossbeam

Always have an authorized installer make any repairs or replacements. Crossbeams are not to be used as wheel engagement lifts. Do not change or modify the crossbeam in any manner.



Shown: M140070 low profile cross beam with optional jack stands

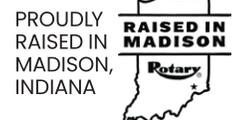

*For use with FLEXMAX™ 19 or FLEXMAX™ 14 series column lifts. Lifts sold separately.


**FLEXMAX™ LIFT SERIES
FRAME-ENGAGING
CROSS BEAM KITS*
SERVICE WHEELS AND TIRES**

**PICK UP BUSES, RVS
AND MORE WITH
WHEELS-FREE,
FRAME-ENGAGING
BEAM AND RAMP KITS**

**SADDLE
BEAM KIT
ML41YL**

32,000 lbs. CAPACITY
at maximum 72" adapter spread
24,000 lbs. CAPACITY
at minimum 49" adapter spread

- Kit includes single cross beam
- Two (2) pairs of frame-engaging adapters
- Two each 5" and 8" adapter extensions
- Portable with built in wheel assembly

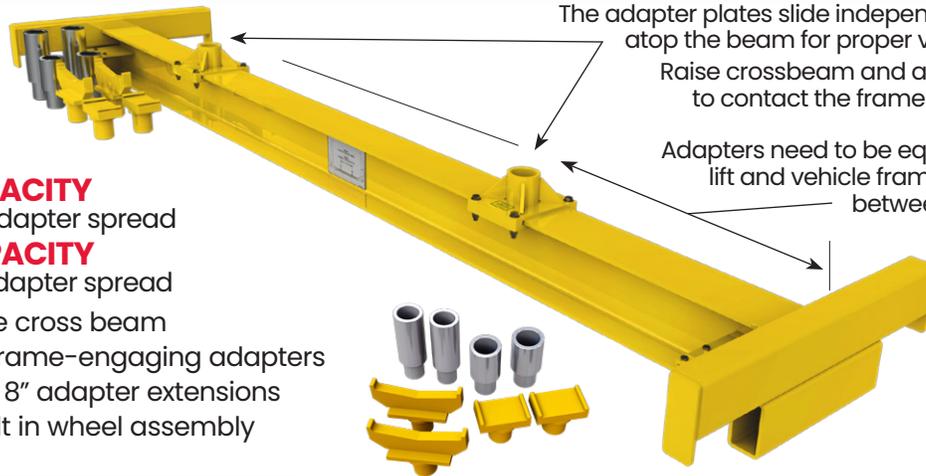

The adapter plates slide independently back and forth atop the beam for proper vehicle frame contact.

Raise crossbeam and adjust sliding adapters to contact the frame at proper lifting point.

Adapters need to be equally spaced off each lift and vehicle frame should be centered between lifts to help prevent offset loading.

Adapters are for vehicle frame engagement only.

**EXTRA WIDE DRIVE-ON
RAMP STYLE BEAM KIT
FD2448KITYL**

28,000 lbs. CAPACITY
154" DRIVE-THRU WIDTH

- Kit includes single cross beam with tow handle
- 26" wide ramps with wheel chocks
- Portable with built in wheel assembly



**EXTRA WIDE RAMP KIT FOR
SERVICE TO SNOW REMOVAL
TRUCKS WITH WINGPLOWS**

NOT SHOWN
**DRIVE-ON BEAM KIT FOR RV PICKUP
FD2353KITYL**

22,000 lbs. CAPACITY
130" DRIVE-THRU WIDTH

- Kit includes single cross beam
- 26" wide ramps with wheel chocks



PROUDLY
RAISED IN
MADISON,
INDIANA



Lit# Rotary.Mobile Beam Kits.Cutsheet.02.01.2026

©2026 VEHICLE SERVICE GROUP™
All Rights Reserved. Unless otherwise indicated,
ROTARY SOLUTIONS™, VEHICLE SERVICE GROUP™, DOVER®
and all other trademarks are property of Dover
Corporation and its affiliates. Product specifications,
part numbers, images and component descriptions
are subject to change without notice or liability.

*For use with FLEXMAX™ 19 or FLEXMAX™ 14 series column lifts. Lifts sold separately.

Visit us at www.RotarySolutions.com / Need assistance? Call 800.445.5438

Sales: insidesales@rotarysolutions.com / Technical Support: LD-techsupport@rotarysolutions.com